


# HYDRO-BOOST WITH RAM ASSIST (P-PUMP)

## Hose installation diagram

POWER STEERING FLUID: Howe Power Steering Fluid PN 1105  
(GM AC Delco PN: 89021182 may be substituted if needed)

**CAUTION:**  
**DO NOT USE ATF (AUTOMATIC TRANSMISSION FLUID)**

NOTE: Hose lengths will vary with each installation, custom hoses must be fabricated.  
Hose kits p/n 950 available separately.

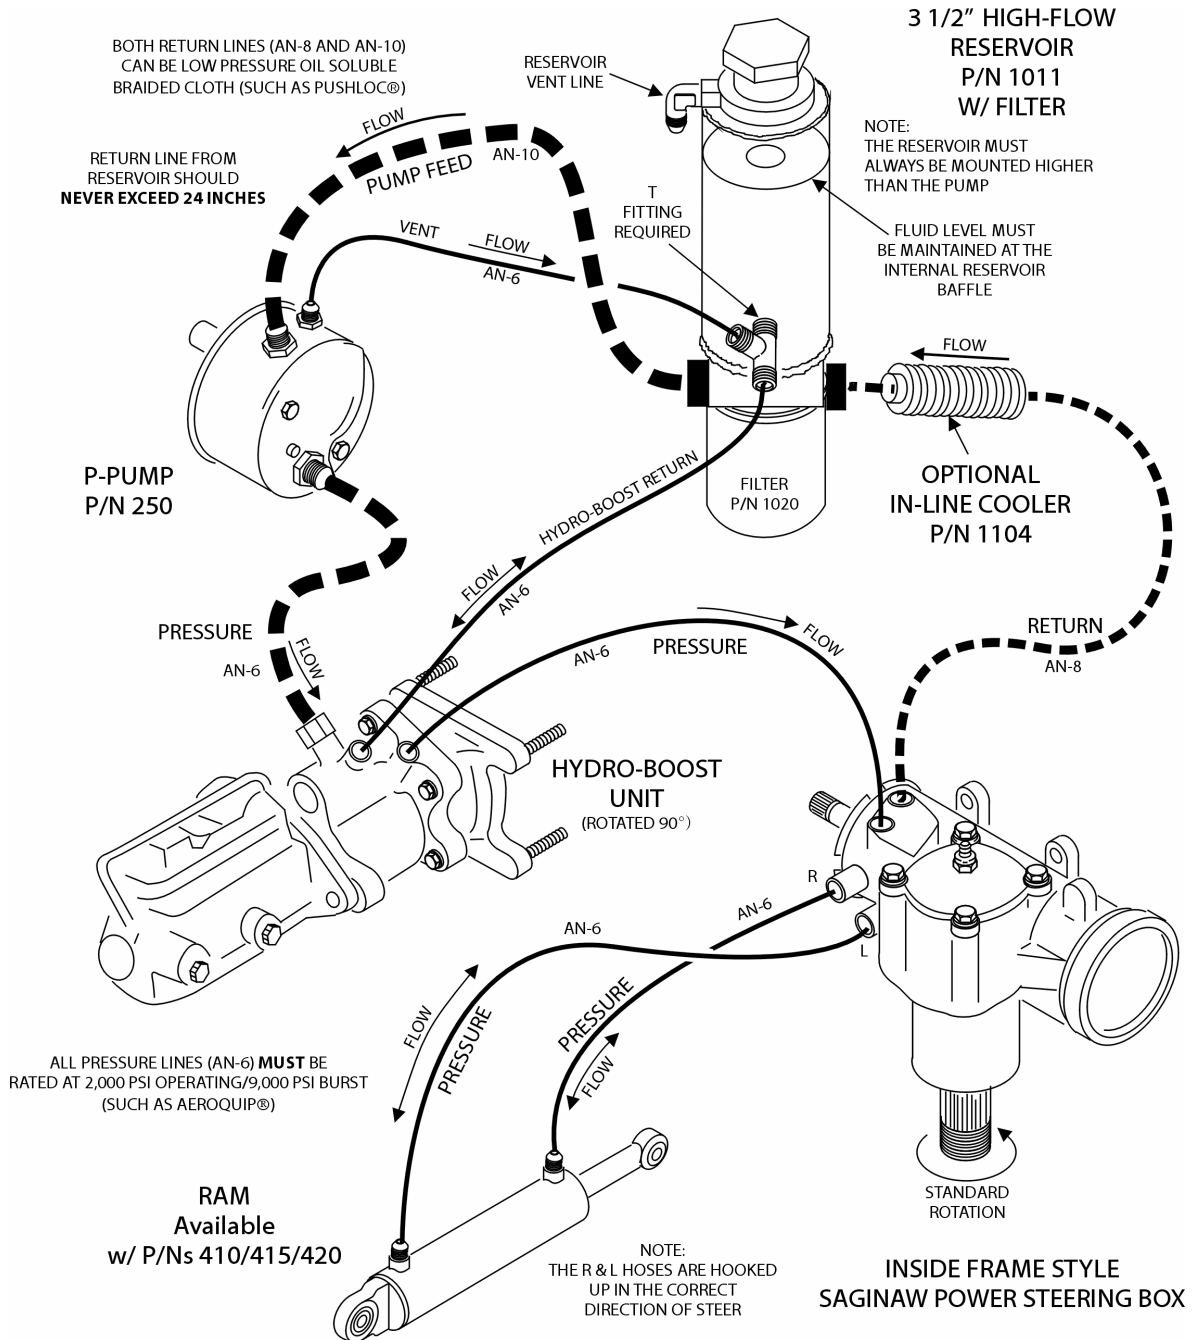

IF YOU HAVE ANY QUESTIONS ABOUT THE INSTALL CALL HOWE PERFORMANCE (619) 561-7764