


HYDRO-BOOST WITH RAM ASSIST (TC PUMP)

Hose installation diagram

POWER STEERING FLUID: Howe Power Steering Fluid PN 1105
(GM AC Delco PN: 89021182 may be substituted if needed)

CAUTION:
DO NOT USE ATF (AUTOMATIC TRANSMISSION FLUID)

NOTE: Hose lengths will vary with each installation, custom hoses must be fabricated.
Hose kits p/n 950 available separately.

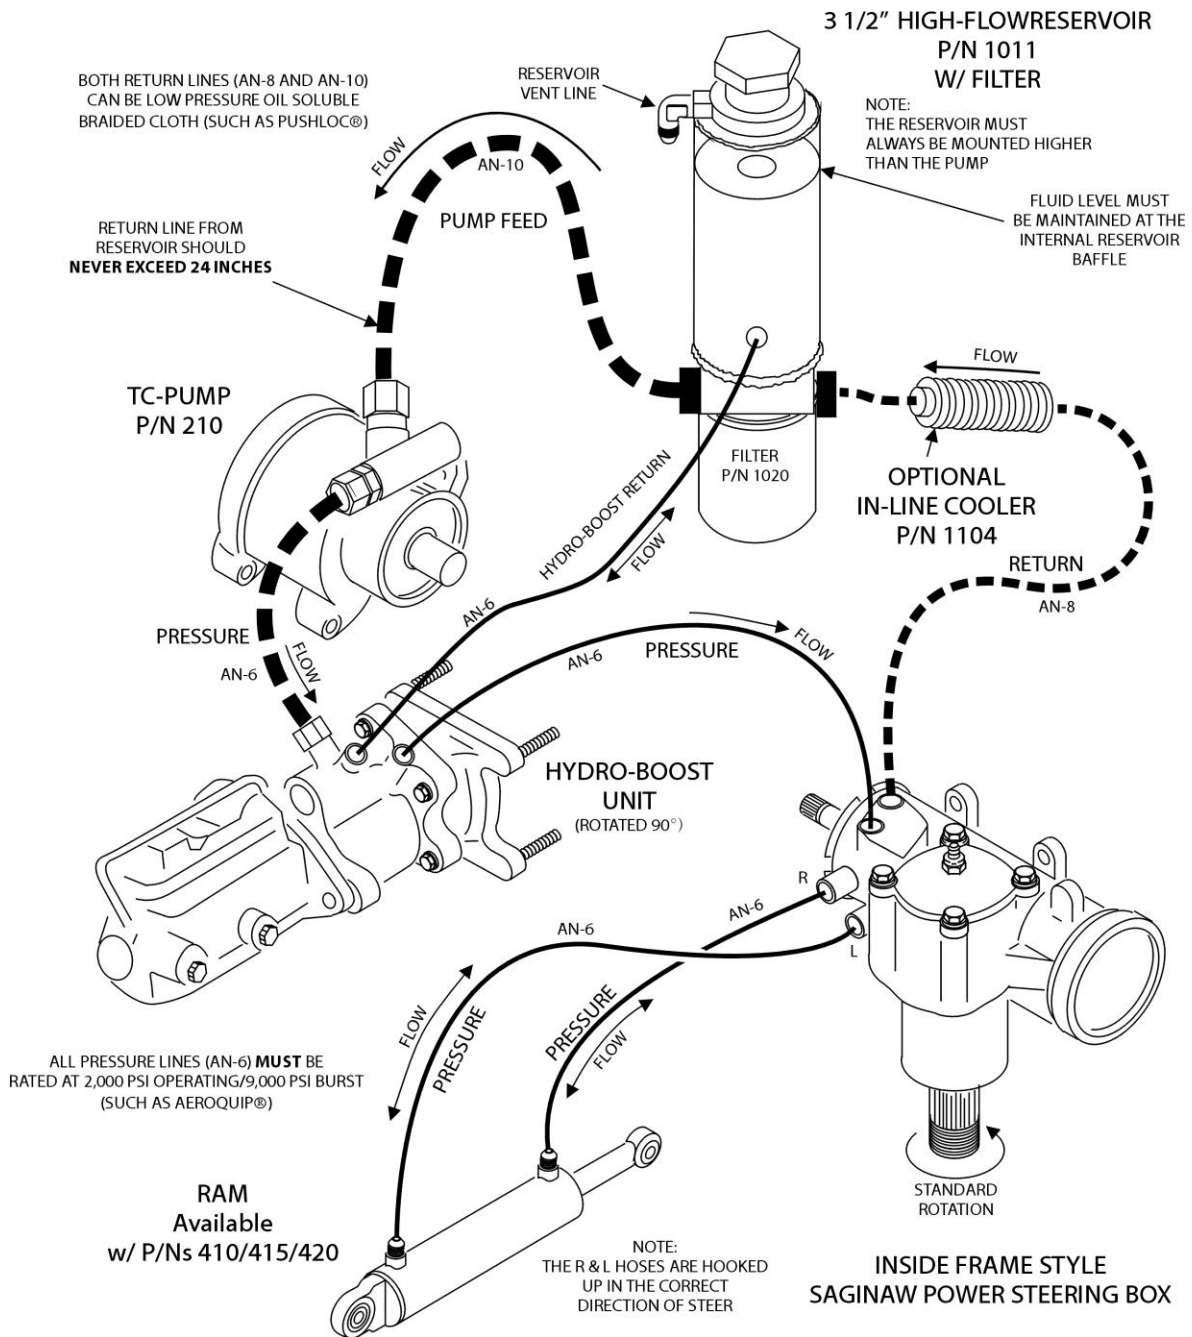

IF YOU HAVE ANY QUESTIONS ABOUT THE INSTALL CALL HOWE PERFORMANCE (619) 561-7764